

- = Not available in this version.

Basic functions

- # Deactivate DTMF input / logout
- A Repeat the last command

- 0 Logout
- 1 Test record
- 2 Listen to personal messages
- 3 Record personal messages
- 4 Check who has messages
- 5 Check the 5 last persons who has logged in

Public messages

- 20 Help
- 21 Record bulletins (Active between two dates)
- 22 Listen to the bulletins you never heard before
- 23 Listen to all active bulletins
- 28 Record to the loop (10msgs)
- 29 Listen to messages from the loop

Link radio functions

- 5444 Help
- 5445 Select channel
- 5446 Start/stop scanning
- 5447 Turn link connection ON or OFF
- 5448 Turn link monitor ON or OFF
- 36 Check what channel you are on

Help functions

- 40 First help
- 41 Calculate your PIN
- 42 Help on basic functions
- 43 Help on command banks

Other basic functions

- 50 Help
- 51 Test DTMF
- 52 Who's logged in
- 55 What is the time?
- 56 What is today's date?
- 57 Test record to file
- 58 Listen to test recording

Weather

- 60 Help
- 61 Indoor temp
- 62 Out door temp
- 63 Max/min temperature in after 24.00
- 64 Max/min temperature out after 24.00
- 66 In and out door temp

Message functions

- 70 Help
- 72 Erase the last message you recorded

Special functions

- 80 Help
- 81 Send CCIR tones
- 82 Send tone (freq,len in sec.) eg. 1750#5= 1750Hz in 5 sec.

Statistics

- 5100 Help
- 5101 Number of users in system
- 5102 Number of times DTMF been unlocked. (Mailbox activated)
- 5103 Number of times DTMF been unlocked (today)
- 5104 Number of logins (total)
- 5105 Number of logins (today)
- 5109 System info all

User info

- 5200 Help
- 5202 Check a users PIN
- 5203 Check how many times a user have logged in
- 5204 Check how many msgs a user have in his/her mailbox
- 5205 Listen to other users messages without erasing them
- 5206 Listen to a users personal info (5306)
- 5207 Listen to your old messages

User functions

- 5300 Help
- 5301 Set Expert or Novice status
- 5302 Set your own user parameters
- 5303 Create new user
- 5304 Delete yourself
- 5305 Re-record your signal
- 5306 Record your personal info (5206)
- 5307 Record your own sound file for optional use
- 5308 Listen to 5307

Miscellaneous functions 2

- 5444 Help
- 5445 Acticate / de-activate burglar alarm
- 5446 Check burglar alarm status
- 5451 Guess a number game
- 5452 Guess a tone frequency game
- 5453 Pair two melodies game

CW-tutor

- 6000 Help
- 6001 Choose number of groups of 5 chars
- 6002 Set CW-speed (ch per min)
- 6003 Send a new characters
- 6004 Re-send the latest chars
- 6005 Answer

Repeater info

- 6500 Help
- 6501 How long has the repeater been open now.
- 6502 Number of times rpt activated and runtime today
- 6503 As above but for this month
- 6504 As above but total

Unused space for your own functions

- 8000-8999

System info

- 9000 Help
- 9003 Free space on hard disc
- 9004 Record time left on hard disc
- 9005 When RLM was started
- 9006 Number of active messages
- 9008 Active messages in megabytes
- 9009 Inactive messages in megabytes

System functions

- 9500 Help
- 9501 Set system time
- 9502 Set system date
- 9506 Erase all in-active messages
- 9509 Erase user (User no.)
- 9511 Log in as sysop

Setup functions

With these DTMF functions you can do the same as in the setupmenu in RLM.

Change : Category#value e.g.: 9601 pttoff, 01#100

Check : Category#* e.g.: 9601 pttoff, 01#*

9601 --- Mailbox

01#sek (1-1000) Time to autologout / deactivate mailbox

02#ant (1-50) Max mails per user

03#ms (0-1000) Tx delay

04#val (0-1) RLM always deactivated (0=No, 1=Yes)

05#val (0-2) Send beacon (0=Off, 1=On)

06#min (1-3000) Max recordingtime.

07#val (0-2) Erase old messages every...
1=Day,2=Month,0=Never

- 08#val (0-9,A-D)Dtmf prefix for this system

- 09#val (0-1) Dtmf command executing when 1=Sq closing, 0=Timeout

- 10#val (0-1) Recording stops when 1=Sq closing, 0=No inc. audio

-(07) 11#val (0-1) 1=Break a file that's playing when SQ opens

9602 --- Repeater

01#val (0-1) 0=Activate rpt with SQ open, 1=
DTMF&accesstone

02#ms (0-2000) How long to send accesstone

03#sek (0-200) Time before the repeater closing

04#val (0-9) Audiosensitivity for identify detector.

05#min (1-1000) Minutes timer

06#sek (1-1000) Seconds timer

07#sek (1-1000) Tid till gummitumme sekv. k'rs

9603 --- Link

01#ch (0-20) Defaultchannel

02#ms (0-2000) Time to send accesstone to open link

03#val (0-1) Start scanning when RLM starts up (1=YES,
0=NO)

04#ms (0-1000) Scanspeed (time between channels)

11#ch (0-20) Select channel to change...

12#val (0-1) 1=DTMF commands available from link

13#val (0-1) 1=Lockout this channel

9604 --- Soundcard

01#kHz (4-16) Samplerrate for recording

9606 --- Access on DTMF functions

01#funk (0-9999) Select function to change

02#acc (0-4) 0=All,1=Logged in, 2=Sysop, 3=Time, 4=Not
available.

- 03#funk (0-9999) Create new function

- 04#ttmm Starttime HHMM (1035)

- 05#ttmm Stopptime HHMM (1035)

9607 --- Logfiles

01#val Userlogg 1=ON, 0=OFF

02#val Repeater 1=ON, 0=OFF

03#val Linklogg 1=ON, 0=OFF

04#val Templogg 1=ON, 0=OFF

05#val Errorlogg 1=ON, 0=OFF

9608 --- Smarttemp

01#temp Adjustment

02#temp Linearity adjustment

03#temp Alarm if the in-door temp goes below...

04#temp Alarmif the in-door temp goes over...

05#temp Alarmif the out-door temp goes below...

06#temp Alarmif the in-door temp goes over..

9698 Regret changes in setup and restore

9699 Save changes in setup

9990 Program + version

9991 Copyright

9992 Registration info